







Parts Breakdown 8800 - Shower Chair/Commode

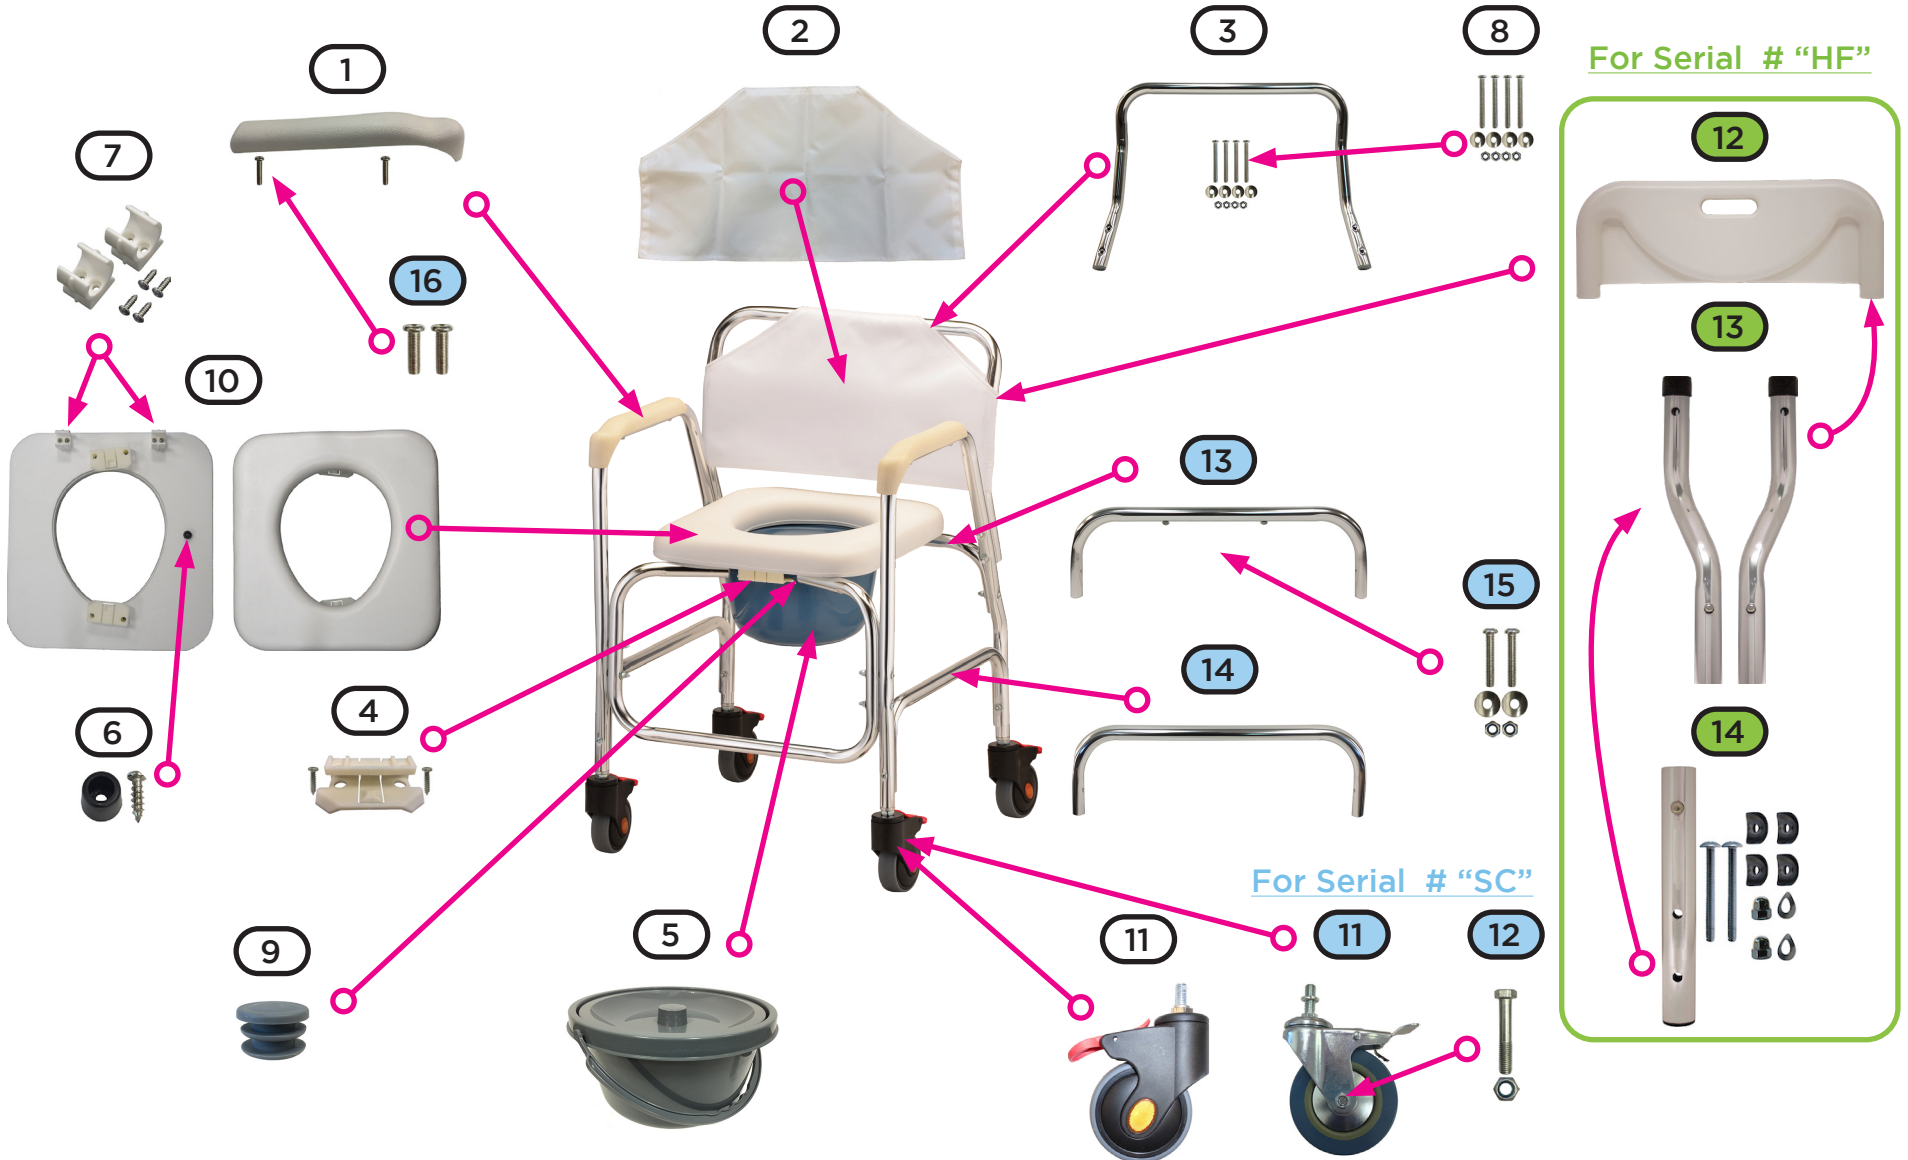

		ITEM # 8800
		COMMODE/ SHOWER CHAIR W/ WHEELS
		SERIAL # BEGINNING WITH "HF"
#	ITEM	DESCRIPTION
1	HF-88004	ARM PAD AND SCREWS
2	P88001	BACK UPHOLSTERY
3	HF-88005	BACKREST AND SCREWS
4	HF-88006	BRACKET
5	SC-88001	BUCKET & LID
6	SC-88005	BUMPER & SCREW FOR SEAT
7	HF-88003	CLAMP SET FOR SEAT
8	SC-88010	HARDWARE LONG SCREW
9	SC-88011	PLUG FOR FRAME
10	HF-88002	SEAT PADDED
11	HF-88001	WHEEL WITH FORK
12	HF-880107	BACK LOWER TUBING
13	HF-88007	TUBING (PAIR) FOR BACK
14	HF-88008	BACK LOWER TUBING

		ITEM # 8800
		COMMODE/ SHOWER CHAIR W/ WHEELS
		SERIAL # BEGINNING WITH "SC"
#	ITEM	DESCRIPTION
1	SC-88012	ARM PAD & SCREWS
2	P88001	BACK UPHOLSTERY
3	SC-88009	BACKREST & HARDWARE
4	SC-88002	BRACKET FOR BUCKET
5	SC-88001	BUCKET & LID
6	SC-88005	BUMPER & SCREW FOR SEAT
7	SC-88004	CLAMP & SCREW FOR SEAT
8	SC-88010	HARDWARE LONG SCREW
9	SC-88011	PLUG FOR FRAME
10	SC-88003	SEAT COMPLETE
11	SC-88006	WHEEL ASSEMBLY
12	SC-88008	AXLE & NUT FOR WHEEL
13	SC-88014	FRAME REAR FOR SEAT
14	SC-88015	FRAME SIDE
15	SC-88016	HARDWARE SHORT SCREW
16	SC-88013	SCREW (PAIR) FOR ARM

		ITEM # 8800
		COMMODE/ SHOWER CHAIR W/ WHEELS
		SERIAL # BEGINNING WITH "NT"
#	ITEM	DESCRIPTION
1	P88004	ARM REST
2	P88001	BACK UPHOLSTERY
3	P88003	BACK AND HARDWARE
4	P8809	PAIL HOLDER
5	P89001	BUCKET WITH LID
7	P88002	SEAT CLAMP
8	P8800BH	HARDWARE FOR BACK
10	P88011	PADDED SEAT
11	P8800WR	WHEEL SWIVEL

CONTACT US!
We're here to help

 info@novajoy.com

 1 800 557 6682

novajoy.com

CARE • QUALITY • INNOVATION



THE NOVA PROMISE